

# Move 2



# Overview



Sonos Move 2 is the premium portable speaker that lets you bring powerful stereo sound from room to room and outdoors.

- **Weatherproof design.** Move 2 meets IP56 water and dust resistance levels. Ideal for barbecues, pool parties, and other outdoor events.
- **Battery lasts up to 24 hours.** Easily recharge by setting Move 2 on the charging base (included). For power on the go, use a compatible USB-PD charger.
- **Stream music over WiFi and Bluetooth®.** Or connect a mobile device using a USB-C line-in adapter (sold separately).
- **Sonos S2 compatible.** Save content in the [Sonos app](#) and enable features like Sonos Voice Control and Trueplay™.
- See [Setup](#) when you're ready to add Move 2 to your Sonos system.

# Controls and lights

---



## Volume control

- Volume up (slide right, or tap + )
- Volume down (slide left, or tap - )

**Note:** To quickly change the volume, press and hold + or - .



## Play/Pause

- Press once to play or pause audio.
- Press and hold to group with the audio that's playing in another room (or to ungroup).



## Next/Previous

- Press > to skip to the next song.
- Press < to go to the previous song.

**Note:** You can't skip forward or go back when listening to a radio station.

---

Press the voice services button to turn voice control on or off. You can set up a voice service in the Sonos app.



#### Voice services on/off

- When the light is on, voice control is available.
- When the indicator light is off, voice control is off.

**Note:** Make sure the universal microphone switch is on.

---



#### Status light

Displays the product's connection to WiFi or Bluetooth, indicates when the volume is muted, and signals errors. [Learn more](#)

---



**Battery light**

Indicates the battery

status:

- Blinking orange indicates low battery.
- Solid orange indicates Move 2 has started charging. The light will stay on for a 10 seconds then turn off, unless the battery is very low.

**Note:** Check battery level

in the Sonos app.

# Connector panel



1

## Handle

Allows for easy lifting and carrying so you can take the Move 2 wherever you go.

2

## Power button

**Press to power on.** The status light turns on to let you know Sonos Move 2 is active.

**Press to put to sleep.** The status light turns off and you'll hear a short tone.

**Press and hold to power off.** The status light turns off and you'll hear a longer tone.

**Note:** Move 2 goes to sleep automatically after 30 minutes when it's off the charging base.

---

**3****Bluetooth button**

Press to connect to a mobile device via Bluetooth. Move 2 will connect to your most recently paired device.

Press again to disconnect the current device.

Press and hold to pair a new device.

---

**4****Universal microphone switch**

Turn all microphones on or off. You can set up a voice service in the Sonos app.

- When the switch is off (down), the microphones are disabled so microphone-related features like auto Trueplay and voice control are unavailable.
- When the switch is on (up), microphone-related features like auto Trueplay are available. Voice control is available if the voice services indicator light on top of the product is also on.

---

---

5

## USB-C port

- **Power:** Use a compatible USB-C and USB-PD charger (USB-C with 45 W, 20 V/2.25 A) for charging Move 2 on the go.
- **Ethernet:** Use the Sonos Combo Adapter and an Ethernet cable to connect Move 2 directly to your router if you want to hardwire your speaker (helpful if your WiFi is unstable).
- **Line-in:** Use either the Sonos Line-In Adapter or Combo Adapter to connect your turntable, CD player, or other device.

---

6

## Charging dock (included)

Set Move 2 on the charging base and it stays active for at-home use while recharging.

**Note:** Use only the included USB-PD charger (using a third-party power supply will void your warranty).

# Charging

---

FEATURE	DESCRIPTION
<b>Charging base</b>	<p>Set Sonos Move 2 on its charging base for easy recharging. The battery light will turn on for 10 seconds to let you know Move 2 is seated correctly (make sure the charging contacts are touching. Move 2 can recharge using Move's charging base).</p> <p>Use only with the included power supply (using a third-party power supply will void your warranty).</p> <p>The charging base is for indoor use only—be sure to keep it dry.</p> <p><b>Note:</b> Check battery level in the Sonos app.</p>
<b>USB-C port</b>	For charging Move 2 on the go, use a compatible USB-PD charger.

## Battery Saver

You can enable **Battery Saver** in the Sonos app to best preserve battery life when Move 2 is inactive. When enabled, your Move 2 will power off automatically after 10 minutes in sleep mode.

Go to  > **System**, and select Move 2 to get started.

**Note:** Move 2 won't appear in the Sonos app until it's powered back on.

# Bluetooth pairing

1. Turn Bluetooth on in your device settings.
2. Press and hold the Bluetooth button on the back of the speaker until you hear a tone, then release. The status light blinks blue when the speaker is ready to pair.
3. Choose **Sonos Move 2** from the list of available devices in your Bluetooth settings. Your mobile device will automatically connect next time you press the Bluetooth button.

## Select a location

You can put your Sonos Move 2 just about anywhere. For maximum performance, here's a few guidelines:

- For best performance, leave at least 1" (2.5 cm) space around the back of Move 2 when placing it next to a wall or shelf.
- It's ultra durable. With a tough outer shell and IP56 rating, Move 2 is built to withstand falls, bumps, moisture, dust, UV rays, and extreme temperatures (charging base is for indoor use only).
- Enable auto Trueplay™ in the Sonos app—Move 2 can tune itself for amazing sound no matter where you are and what you're listening to.
- Don't use or store your Sonos speaker upside down.

# Microphone on/off

The microphones in Sonos Move 2 are used for voice control and other features found in the [Sonos app](#), like auto Trueplay™.

The universal microphone switch on the back allows you to quickly turn on or off all microphones in the speaker and adds an extra level of privacy when you want it (it's turned on out of the box).

The voice services button on top toggles voice control on and off without affecting the microphones needed for auto Trueplay and other microphone-related features.

## When the voice services light is on:

- If you set up voice control, it's ready to listen.
- The universal microphone switch is on.

## When the voice services light is off:

- If you set up voice control, it's not available.
- The universal microphone switch could be on or off.

# Voice services

Use your voice to control your Sonos system with any voice-enabled Sonos product—play and control content, turn the volume up or down, and more.

- **Sonos Voice Control:** control your whole Sonos system with hands-free ease and unmatched privacy. Sonos Voice Control comes ready to use—it only takes a few seconds to add when you set up your speakers. [More information](#)
- **Amazon Alexa:** you'll need the Sonos app and the Alexa app with the Sonos skill enabled. You'll make some changes in both apps during setup. [Learn more](#)
- **Siri:** you'll need the Apple Home app. Add your AirPlay2-compatible Sonos speakers to the Apple Home app and then use an iPhone, iPad, or Apple TV to ask Siri to play music (currently limited to Apple Music). [Learn more](#)

**Note:** Voice control isn't supported in every country yet—this feature will be available as soon as Sonos and a voice service launch together in your region.

# Trueplay™

Every room is different. Trueplay tuning measures how sound reflects off walls, furnishings, and other surfaces in a room, then fine tunes your Sonos speaker to make sure it sounds great no matter where you've placed it.

Trueplay works on iOS mobile devices running iOS 8 or later. During tuning, you'll move around the room holding your mobile device.

1. Select  > **System**, and pick the room you want to tune.
2. Choose **Trueplay Tuning** to get started.

## Auto Trueplay

Portable Sonos products like Sonos Roam and Move can tune themselves automatically. Auto Trueplay uses your speaker's microphone to detect the environment and make periodic tuning adjustments so you get great sound wherever your speaker is and whatever you're listening to.

Go to  > **System**, and select your portable speaker to turn on auto Trueplay.

## Set up stereo pair

Pair two Sonos speakers in the same room for an even wider, stereo experience. One speaker serves as the left channel and one serves as the right channel.

**Note:** The Sonos speakers in a stereo pair must be the same type.

1. Place the speakers 8 to 10 feet apart. Your favorite listening position should be 8 to 12 feet from the paired speakers—less distance increases bass, more distance improves stereo imaging.
2. Go to  > **System**.
3. Select one of the speakers you want to use in the stereo pair, then choose **Set Up Stereo Pair** to get started.

[Learn more](#)

# Product settings

You can customize Sonos products for your surroundings. Go to  > **System** and select a product.

---

## Room Name

If you move your speaker to a new room, you can change its name in **Settings**.

---

## Turn off WiFi

(not available for Sonos Era 100, Era 300, or portable products)

You can turn off your speaker's WiFi when it's connected to your network with an Ethernet cable. This reduces power consumption and can improve connectivity for wired speakers.

For products like Amp and Port, turning off WiFi can reduce the internal temperature when they're placed in a rack or stacked.

[Learn more](#)

**Note:** WiFi is turned off for Era 100 and Era 300 when you connect a [Sonos Combo Adapter](#) using the Ethernet cable.

---

## EQ

Sonos products ship with preset equalization settings. You can change the sound settings (bass, treble, or loudness) to suit your personal preferences. [Learn more](#)

---

## Trueplay

Trueplay adapts the sound for your surroundings and content. Portable products can tune themselves automatically. [Learn more](#)

---

---

**Volume Limit**

You can set a maximum volume for each room. [Learn more](#)

---

**Status Light**

Displays the speaker's connection to WiFi, indicates when the volume is muted, and signals errors. [Learn more](#)

**Note:** If the light is distracting, you can turn it off in **Settings**.

---

**Touch Controls**

You can disable the touch control on your speaker. You may want to do this to prevent a child or curious pet from accidentally adjusting playback or volume. [Learn more](#)

---

**Battery Saver**

(portable products only)

To save battery life, you can set your portable speaker to power off automatically instead of going to sleep. It won't appear in the Sonos app until it's powered back on.

---

---

When a projector, turntable, stereo, or other audio device is connected to a Sonos product, you can adjust these line-in settings:

- **Source name:** Choose a name for the line-in device.
- **Source level:** Adjust the line-in source level if you find the default volume setting is too quiet or distorted.
- **Audio Delay:** Add a delay between the line-in source and Sonos to reduce the chance of audio issues occurring when you're playing line-in audio on grouped speakers.
- **Autoplay:** Choose a room if you want line-in audio to start playing automatically when Sonos detects a signal on the line-in port.

## Line-In

(Sonos products with line-in capability)

# Specifications

---

FEATURE	DESCRIPTION
<hr/>	
AUDIO	
Amplifiers	Three Class-D digital amplifiers.
Tweeters	Two angled tweeters create a crisp and accurate high frequency response and stereo separation.
Woofers	One midwoofer ensures the faithful playback of mid-range vocal frequencies and deep bass.
Microphones	<ul style="list-style-type: none"><li>• Far-field microphone array.</li><li>• All microphones, including voice control, can be turned off using the universal microphone switch on the back of the speaker.</li></ul>
Voice	<ul style="list-style-type: none"><li>• Integrated voice control.</li><li>• When the voice services light is off, voice assistants are not listening but other microphone-related features, like auto Trueplay, are still active.</li></ul> <p>Enable in the Sonos app.</p> <p><b>Note:</b> The universal microphone switch must be turned on.</p>

---

FEATURE	DESCRIPTION
<b>Auto Trueplay</b>	<p>This software continually optimizes the speaker's sound for its environment and the audio content playing.</p> <p>Enable in the Sonos app.</p> <p><b>Note:</b> The universal microphone switch must be turned on.</p>
<b>Adjustable EQ</b>	<p>Use the Sonos app to adjust:</p> <ul style="list-style-type: none"><li>• Bass</li><li>• Treble</li><li>• Loudness</li></ul>

---

## POWER & CONNECTIVITY

---

<b>Power supply</b>	<p><b>Charging base:</b> 100-240 VAC, ~50/60 Hz, 1.2 A.</p> <p>Output: 15.0 VDC, 3.0 A, 45.0 W</p> <p><b>USB port:</b> USB-C PD power with 45 W, 20 V/2.25 A.</p>
	<p><b>Note:</b> Move 2 can recharge using Move's charging base.</p>

---

---

FEATURE	DESCRIPTION
<b>Battery</b> (replaceable)	<p><b>Capacity:</b> 3100 mAh</p> <p><b>Replacement:</b> Visit our website for more information.</p> <p><b>Disposal:</b> Check with your local waste or recycling company to determine the proper disposal method in your area.</p>
<b>WiFi</b>	Connects to WiFi network with any 802.11 a/b/g/n/ac/ax 2.4 GHz or 5 GHz broadcast-capable router.
<b>Bluetooth</b>	Bluetooth 5.0 supports audio streaming from any Bluetooth enabled device.
<b>USB-C</b>	Connect an audio source using an auxiliary cable and the Sonos Line-In Adapter. Connect your router with an Ethernet cable and the Sonos Combo Adapter. (Accessories sold separately.)
<b>CPU</b>	Quad Core 4x A55 1.4 GHz
<b>Memory</b>	1 GB SDRAM 8 GB NV
<hr/> <b>DETAILS &amp; DIMENSIONS</b> <hr/>	

---

FEATURE	DESCRIPTION
Dimensions (H x W x D)	9.53 x 6.29 x 4.96 in (242 x 160 x 126 mm)
Weight	6.61 lb (3.0 kg) (includes battery)
Operating temperature	32° to 104° F (0° to 40° C)
Storage temperature	-13° to 158° F (-25° to 70° C)
Humidity resistant	Move 2 meets IP56 water and dust resistance levels. <b>Note:</b> The charging base is for indoor use only.
Colors	Matte black Matte white Matte olive
What's in the box?	Move 2, charging base with 6 ft (2 m) USB-C to C cable, 45 W USB-C PD power adapter, and Quickstart guide.

---

# Important safety information

**Caution:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Clean only with a dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos products.  
Sonos products with rubber rings on the bottom, such as Move, Move 2, One, and One SL, may leave a faint ring on some surfaces treated with polyurethane. This ring can be easily removed by wiping with a damp cloth.
6. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
7. Do not expose batteries (battery pack or batteries installed) to excessive heat such as sunshine or fire.
8. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way.
12. The Mains plug should be readily available to disconnect the equipment.
13. Connections between this device and external equipment must be made using a shielded cable in order to maintain compliance with FCC radio frequency emission limits.

**Warning:** Sonos Move 2 meets IP56 water resistance levels. To reduce the risk of fire or electric shock, don't expose this apparatus to a soaking rainstorm.


Move 2

Get  
Set  
S

SONOS

# 1

Connect Move 2  
to power

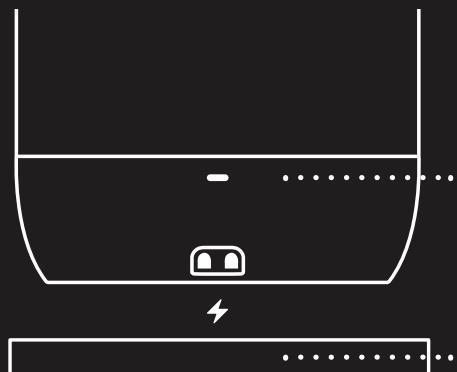

## USB-C port

Use a compatible USB-PD charger  
for charging on the go.

## Charging base

Plug the charging base into a power  
outlet and put Move 2 on the base.

# 2



Download the  
Sonos app for setup



Open the Sonos app and tap Add, or go to  
Settings > System > Add Product.

# At a glance

Use WiFi to set up Sonos Move 2.  
Stream content over WiFi and Bluetooth®.

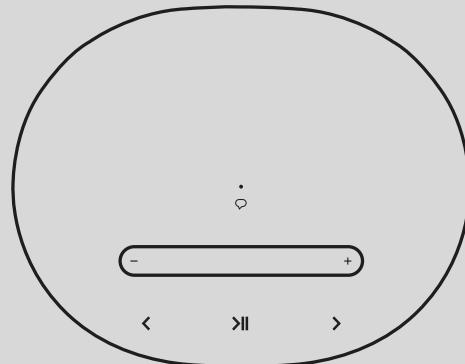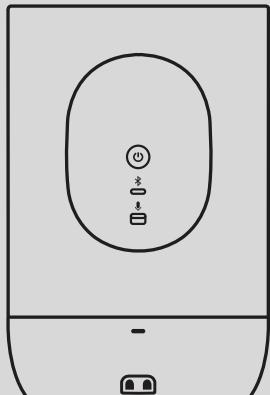

## Power

Press quickly to power on or put to sleep. Long press to power off.



## Bluetooth

Long press to pair new device. Short press to reconnect.



## Microphone Switch

When toggled off, all microphone-enabled features, including voice services, are unavailable.



## Voice Services

Tap to turn on and off.



## Previous Track



## Play / Pause



## Next Track



## Volume Down

Slide left (or tap -)

## Volume Up


Slide right (or tap +)



## Group

Press and hold to group Sonos products.

*Note: Voice control is not supported in every country yet. This feature will be available as soon as Sonos and a voice service launch together in your region.*

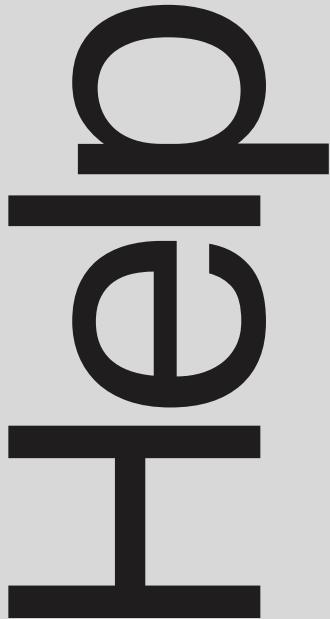

## Customer Support

[sonos.com/support](http://sonos.com/support)

## User Guide

[sonos.com/guides/move2](http://sonos.com/guides/move2)

Terms of Use, License and Warranty  
[www.sonos.com/legal/terms-of-use](http://www.sonos.com/legal/terms-of-use)

© 2023 Sonos, Inc. All rights reserved. Sonos\*, Sonos Move 2, and Move 2 are trademarks or registered trademarks of Sonos, Inc. \*Reg. U.S. Pat & TM Off.



640-00959

### Dansk – Quickstartguide

1. **Sæt strøm til Move 2. USB-C-port** - Brug en kompatibel USB-PD-oplader på farten. **Opladningsfod** - Sæt opladningsfoden i en stikkontakt, og sæt Move 2 på opladeren.
2. **Download Sonos-appen til opsætning**. Åbn Sonos-appen, og tryk på Tilføj, eller gå til **Indstillinger > System > Tilføj produkt**.

**Strøm** - Tryk hurtigt for at tænde eller sætte i dvale. Tryk længe for at slukke. **Bluetooth** - Langt tryk for at parre en ny enhed. Kort tryk for at oprette forbindelse igen. **Mikrofon tænd/sluk** - Når den er slæt fra, kan du ikke benytte de funktioner, der skal bruge mikrofon, fx stemmetjenester. **Stemmetjenester** - Tryk for at slå til eller fra. **Lydstyrke ned** - Skub til venstre (eller tryk på –). **Lydstyrke op** - Skub til højre (eller tryk på +). **Gruppér** - Hold nede for at gruppere Sonos-produkter.


### Deutsch – Kurzanleitung

1. **Schließe den Move 2 an den Strom an. USB-C-Port** - Mit einem kompatiblen USB-PD-Ladegerät kannst du ihn auch unterwegs aufladen. **Ladestation** - Verbinde die Ladestation mit einer Steckdose und stelle den Move 2 auf die Ladestation.
2. **Lade zum Einrichten die Sonos App herunter.** Öffne die Sonos App und tippe auf Hinzufügen oder auf **Einstellungen > System > Produkt hinzufügen**.

**Einschalttaste** - Drücke die Taste, um ihn einzuschalten oder in den Schlafmodus zu versetzen. Halte die Taste lange gedrückt, um ihn auszuschalten. **Bluetooth** - Halte die Taste lange gedrückt, um ein neues Gerät zu verbinden. Drücke die Taste kurz, um die Verbindung wiederherzustellen. **Mikrofon ein/aus** - Wenn es ausgeschaltet ist, sind alle mit dem Mikrofon verbundenen Features, einschließlich der Sprachdienste, nicht verfügbar. **Sprachdienste** - Tippe die Taste, um die Sprachdienste zu aktivieren oder zu deaktivieren. **Leiser** - Nach links wischen (oder - antippen). **Lauter** - Nach rechts wischen (oder + antippen). **Gruppieren** - Gedrückt halten, um Sonos Produkte zu gruppieren.

# Sonos system

## Overview

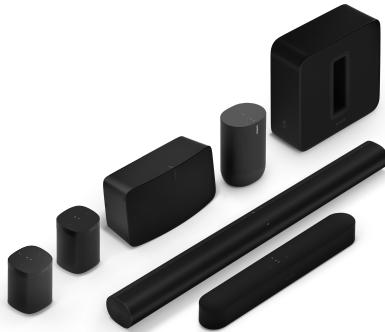

### The Sonos Sound System—

- Sonos is the wireless sound system that fills as many rooms as you want (up to 32) with music, movies and TV.
- Free **Sonos app** guides you through setup and provides system control for everyone in the house.
- Compatible with iOS, Android, Mac, and PC.
- Easily manage your system from any room.
- Mix and match products to build a home sound system that fits your lifestyle.

# Explore our products

Sonos products work together seamlessly. It's easy to add speakers and expand your system as your home changes.

## Speakers

The perfect wireless speaker for any room in your home. You can even stereo pair two speakers (same model) in a room—turn each one into separate left and right channels for wider, bigger, and deeper sound.

- **Roam** , **Roam SL** and **Move**: portable, durable smart speakers for indoor and outdoor listening.
- **Era 100**: The compact smart speaker designed for room-filling sound.
- **Era 300**: the premium smart speaker designed for spatial audio listening.
- **Five**: biggest home speaker with boldest sound.
- **One** and **One SL**: enjoy rich sound with these surprisingly powerful, compact speakers.

## Home theater

Sonos products for your TV provide full-theater sound and play music too. Enhance your home theater experience by adding a Sub, a pair of surrounds, or both.

- **Arc** and **Arc SL**: premium smart soundbar for TV, movies, music, gaming, and more. Place on furniture or wall mount.
- **Beam (Gen 2)**: the smart compact soundbar, now with Dolby Atmos. Place on furniture or wall mount.
- **Ray** : the soundbar for music, TV, and more, with great sound for compact spaces. Perfect for small to medium-sized rooms. Place on furniture or wall mount.
- **Sub**: add dramatically deeper bass to any Sonos speaker, for home theater and music.
- **Sub Mini**: the compact wireless subwoofer for bold bass.

## Components

Convert existing speakers, stereos, and home theater into music streaming systems with an amplifier.

- **Amp**: versatile amplifier for powering all your entertainment.
- **Port**: flexible streaming component for your stereo or receiver.

## Accessories

Find the perfect accessory for your Sonos system on our website.

- If your existing WiFi isn't reliable enough for streaming music, you can purchase a Sonos **Boost**.
- Wall mount kits or stands tailored to perfectly fit your Sonos products.
- Turntables to bring vinyl to your Sonos system.
- Cables and more.

## Stream Music, TV, and more

Sonos gives you easy access to all the content you love—play the latest music from your favorite artist on Spotify, a local news radio station, and much more.

- **Sonos Radio**: free out of the box access to news, sports, talk, and music from more than 60,000 global broadcast stations. Plus original content, only on Sonos.
- **Sonos Radio HD**: subscribe for ad-free listening, lossless audio, and access to exclusive stations and artist content.
- **Music services**: explore and manage your music services—add your own or try something new.
- **Stored on your computer**: play music stored on your computer or any Network-Attached Storage (NAS) device.
- **Imported playlists**: Sonos is compatible with iTunes playlists, as well as M3U, WPL and PLS playlist files created with third-party software.
- **Other audio devices**: play music from a turntable or other external audio device.

# Group speakers in different rooms

Listen in any room or every room—play a movie in the living room, a podcast in the kitchen, or group two or more speakers together so they play the same audio. If you have a home theater set up, you can send the TV sound to other speakers, too.

## Control your way

- **The Sonos app.** The free Sonos app is the easiest way to play anything and everything on Sonos. Simply open the app and choose your favorite music.
- **Voice commands.** If you have a voice-enabled Sonos speaker, use your voice to play and control the music.
- **Speaker controls.** If you're near a speaker, use the touch controls to start or stop the music, or adjust the volume.
- **Stream from your favorite services.** Control Sonos from a different app like Spotify, Pandora, or Pocket Casts.
- **Apple AirPlay 2.** Use AirPlay 2 to stream music, movies, podcasts, and more directly from your favorite apps to your Sonos speakers. Listen to Apple Music on your Sonos One. Watch a YouTube or Netflix video and enjoy the sound on Sonos.

# Important Product Information

For End User License Agreement and additional product information: [www.sonos.com/guides](http://www.sonos.com/guides)

The installer of this radio equipment must ensure that the product is located such that it does not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's Web site [www.hc-sc.gc.ca/rpb](http://www.hc-sc.gc.ca/rpb). As mentioned before, the installer cannot control the antenna orientation. However, they could place the complete product in a way that causes the problem mentioned above. The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Be advised that high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices. Operation of transmitters in the 5.925-7.125 GHz band is prohibited for control of or communications with unmanned aircraft systems.

L'installateur du présent matériel radio doit veiller à ce que le produit soit placé ou orienté de manière à n'émettre aucun champ radioélectrique supérieur aux limites fixées pour le grand public par le ministère fédéral Santé Canada consultez le Code de sécurité 6 sur le site Web de Santé Canada à l'adresse : [www.hcsc.gc.ca/rpb](http://www.hcsc.gc.ca/rpb). Comme indiqué auparavant, l'installateur ne peut pas contrôler l'orientation de l'antenne. Il peut néanmoins placer le produit tout entier de manière à provoquer le problème décrit ci-dessus.

Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux. L'exploitation d'émetteurs dans la bande 5,925-7,125 GHz est interdite pour le contrôle ou les communications avec des systèmes d'aéronefs sans pilote.

Les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

## RF Exposure Requirements

To comply with FCC and Industry Canada exposure essential requirements, a minimum separation distance of 20cm (8 inches) is required between the equipment and the body of the user or nearby persons.

## Exigences en matière d'exposition aux radiofréquences

Pour satisfaire aux exigences essentielles de la FCC et d'Industrie Canada concernant l'exposition, une distance minimum de 20 cm (8 pouces) doit être respectée entre l'équipement et l'utilisateur ou des personnes se trouvant à proximité.

This class B digital apparatus complies with ISED CAN ICES-3(B), NMB-3(B), RSSGEN, and RSS-247.

Cet appareil numérique de classe B est conforme aux normes ISED CAN ICES-3(B), NMB-3(B), RSS-GEN et RSS-247.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## Important Safety Information

1.	Read these instructions.
2.	Keep these instructions.
3.	Heed all warnings.
4.	Follow all instructions.
5.	Do not use this apparatus near water.
6.	Clean only with dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos products.
7.	Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8.	Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9.	Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10.	Only use attachments/accessories specified by the manufacturer.
11.	Unplug this apparatus during lightning storms or when unused for long periods of time.
12.	Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13.	The Mains plug should be readily available to disconnect the equipment.
14.	 <b>Warning:</b> Sonos Move 2 meets IP56 water resistance levels. To reduce the risk of fire or electric shock, don't expose this apparatus to a soaking rainstorm.



610-00148

610-00148 Rev A